




800-336-4864

tele-movers.com

B. Multi-Module Wiring

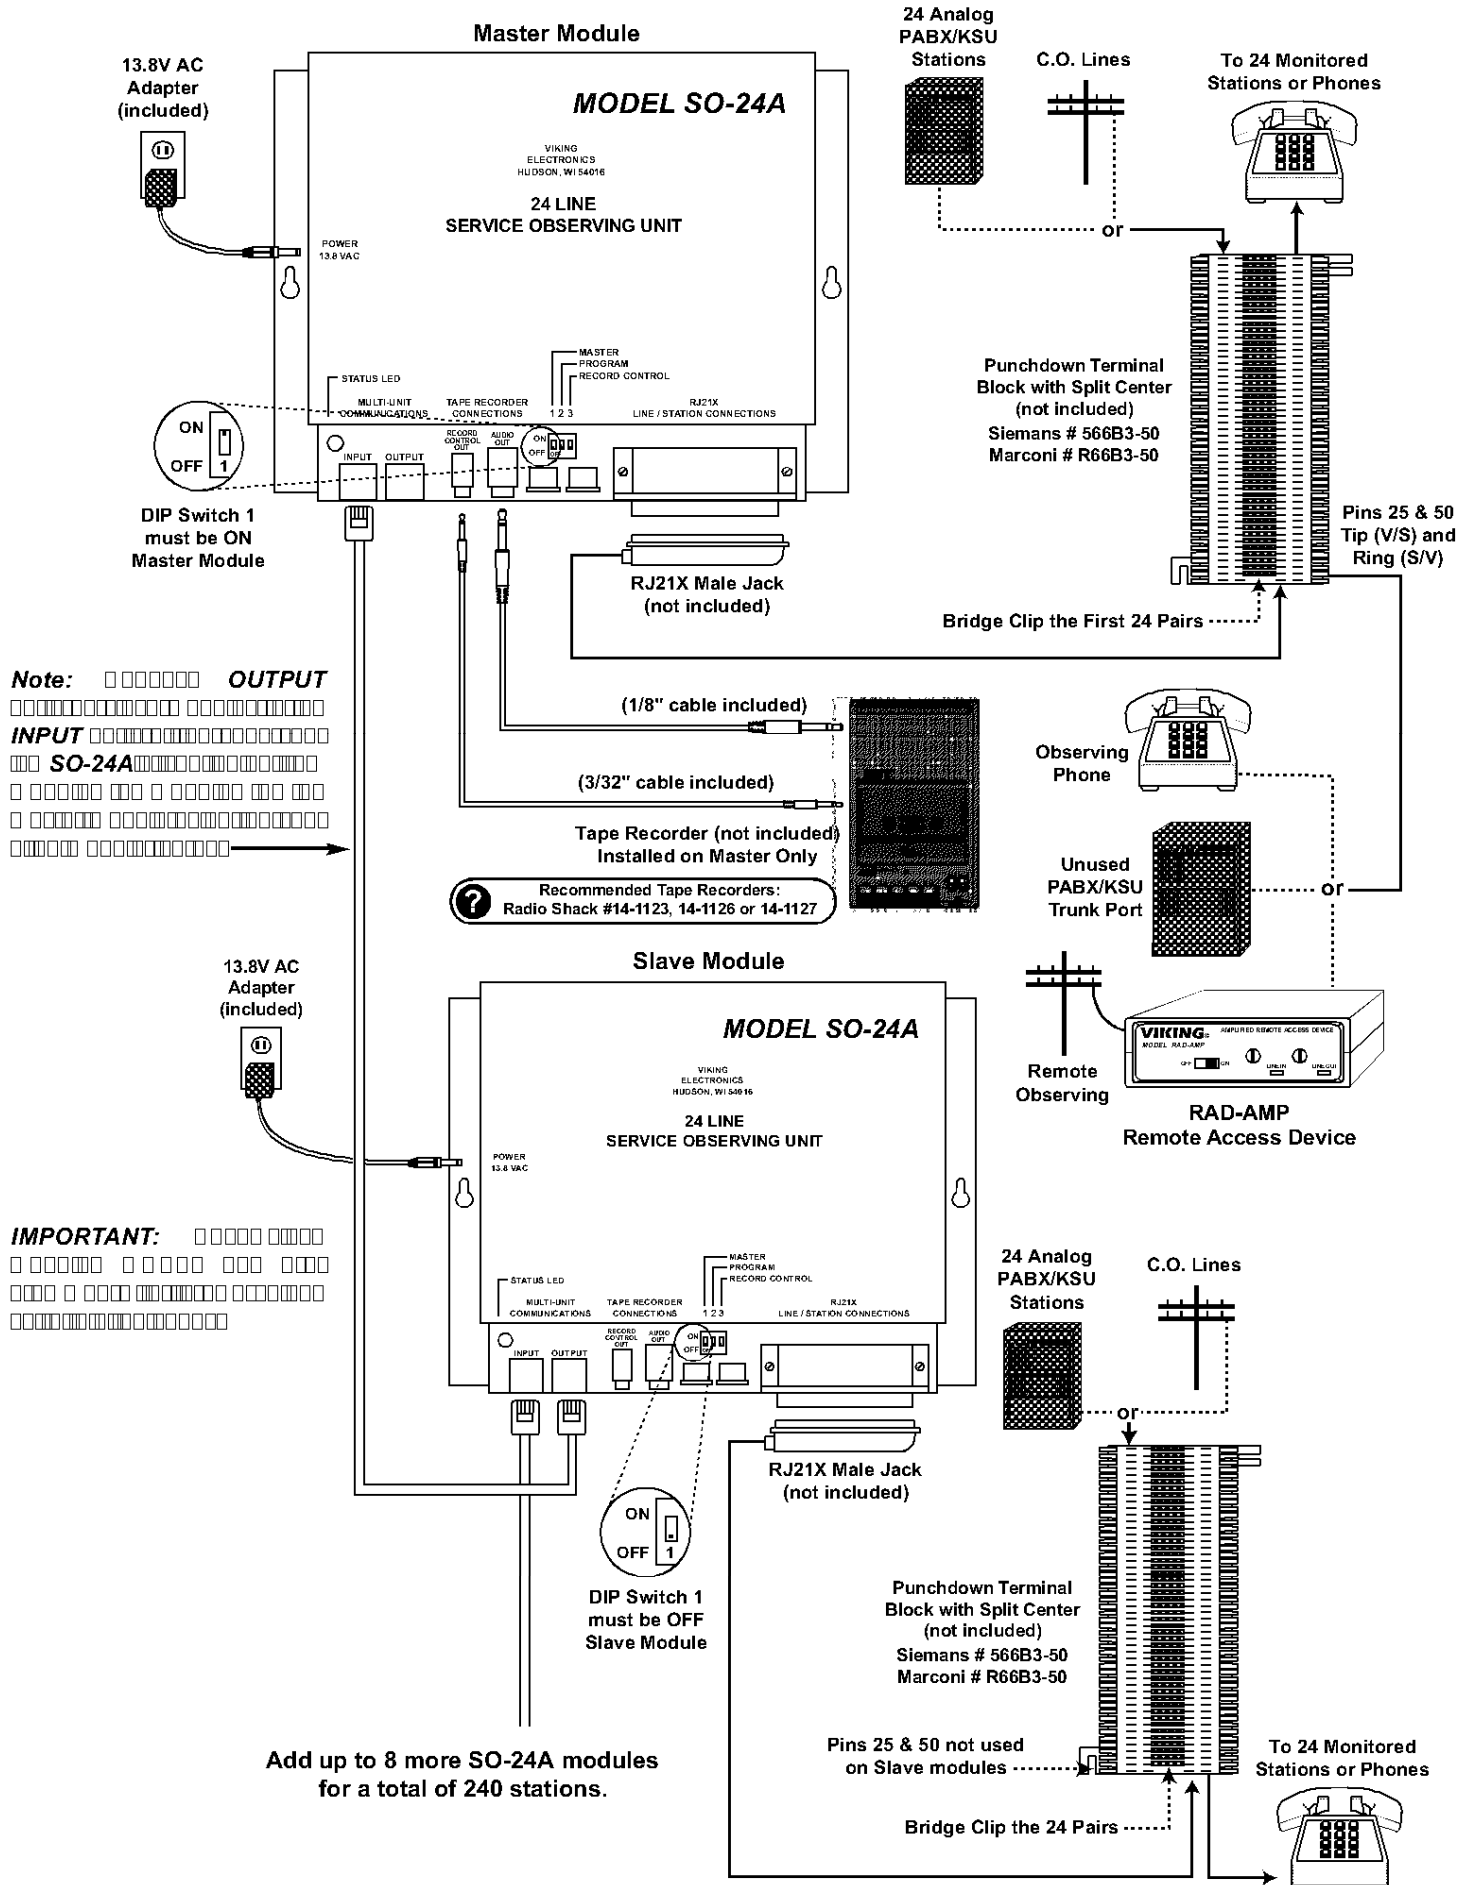

B. Accessing the Programming Mode

Step 2.	Come off-hook on the observing phone and dial a *.
Step 4.	When finished programming, hang-up and set DIP switch 2 to OFF.

Note: DO NOT REPROGRAM THE SYSTEM WHILE THE PHONE IS IN PROGRAMMING MODE OR WHILE THE PHONE IS ON HOOK OR WHILE THE PHONE IS IN USE BY ANY OTHER PERSON OR DEVICE OTHER THAN THE PHONE BEING PROGRAMMED OR WHILE THE PHONE IS ON HOOK OR WHILE THE PHONE IS IN USE BY ANY OTHER PERSON OR DEVICE OTHER THAN THE PHONE BEING PROGRAMMED

C. Setting the Number of Digits (for Dial Up Codes)

The dial up codes are factory set to two digits (01-24). Each **SO-24A** in a multi-module configuration needs to be programmed with the same number of digits for all dial up codes. To program the number of digits, use the chart below:

... two digit dial up codes	Access Programming as shown in section B	Enter digits: 2 # 00
... four digit dial up codes	Access Programming as shown in section B	Enter digits: 4 # 00

Important: ALL SO-24A MODULES MUST BE PROGRAMMED WITH THE SAME NUMBER OF DIGITS FOR ALL DIAL UP CODES

D. Dial Up Codes

The **SO-24A** is factory set with the dial up codes for locations 1-24 factory set to 01-24. The dial up codes may be programmed to match the extension number of the line/station being observed or any other numbering scheme as long as all access codes are the same length (see section **C**). **Important:** ALL DIAL UP CODES MUST BE THE SAME LENGTH FOR ALL SO-24A MODULES IN A MULTI-MODULE CONFIGURATION

...dial up code 231 for location 03	Access Programming as shown in section B	Select 3-digit dial up codes as shown in Programming section C	Enter: 231 #03
...dial up code 2714 for location 14	Access Programming as shown in section B	Select 4-digit dial up codes as shown in Programming section C	Enter: 2714 #14

E. Talk Assist

The talk assist feature can be activated any time a location is being observed and a "*" is dialed at the observing phone. To prevent accidental talk assist, the feature may be disabled by entering *0 while in the programming mode (see section **B**). Enter *1 to enable talk assist.

F. Quick Programming Guide

Enter Digits - then - Enter Memory Location

To set dial up codes to three digits	3	then	#00
To program dial up codes	2-4 digits	then	#01 - #24
To disable talk assist	*0		

To activate the tape recorder automatically when a station is being observedset DIP switch 3 to ON

Note: DO NOT REPROGRAM THE SYSTEM WHILE THE PHONE IS IN PROGRAMMING MODE OR WHILE THE PHONE IS ON HOOK OR WHILE THE PHONE IS IN USE BY ANY OTHER PERSON OR DEVICE OTHER THAN THE PHONE BEING PROGRAMMED

Operation

From the observing port, any of the stations can be accessed by dialing a programmable 2, 3 or 4 digit Touch Tone dial up code. Stations being observed are unaware that they are being monitored. Automatic gain control equalizes in and out-bound conversation levels. If assistance is required, the observer can quickly enter the conversation by dialing a Touch Tone "*" An audio out jack provides a microphone level signal for a tape recorder while the record control jack provides remote operation of the tape recorder on command. Additional **SO-24A**'s may be used to add 24 additional stations or lines at a time. A multi-module configuration of **SO-24A**'s is capable of supporting 240 lines or stations.

B. Multiple Supervisors

If multiple simultaneous supervisors are required, parallel **SO-24A**'s must be installed for each additional supervisor.

